

Global Warming is happening – Enviro-Save helps reduce Global Warming!

Please recycle the bottles, packaging material and cardboard.

We do not purchase styro-foam for packing, we use environmentally friendly packing peanuts, paper and any packaging products we can recycle.

Heavy Duty Truck – Instruction Sheet

for Enviro-Save[®] Powertrain Protection Kit

Your Powertrain Protection Kit contains products to protect your truck's engine, transmission(s), transfer case (if multi wheel drive), differential(s), wheel bearing oil hubs and power-steering. Once treated, you will save money in various ways and assist in reducing global pollution by using Enviro-Save[®] Engine & Powertrain Protection Metal Treatment.

For best results, the application procedures should be carried out at a convenient time when the truck or equipment can be **operated for 1 hour minimum** after all components are treated, the engine crankcase and fuel system last. **Gas engines** must have clean oil and new oil filter prior to treating. **Diesel engines must use Enviro-Save[®] Diesel Engine Pre-Treatment Cleaner** (8 - 10% of engine oil capacity) for 1500 km's (1000 miles) or 8 - 15 hours (whichever is longer) **accumulated** operating time prior to a hot oil drain/change and oil filter(s). **Diesel Engine Crankcase Treatment must be used with clean oil and new oil filter(s).**

1. **Read and follow all application instructions and notes carefully**, noting specific treatment quantities of the various different treatments listed within or on the containers. Prior to pouring, check cap **“invert” and shake all containers vigorously for minimum 15 seconds** to thoroughly disperse resin, check bottom of container for resin / sufficient agitation. In cold climates, bring products up to room temperature prior to agitation. Diesel Engine Pre-Treatment Cleaner does not contain resin.
2. Remove oil level/filler caps/plugs on transmission(s), transfer case, differential(s), steering axle wheel bearing oil hubs and power-steering. Invert and agitate the recommended amount of Transmission/Gear/Differential Treatment and pour it into the transmission(s), transfer case, differential(s), and wheel bearing oil hubs (60 ml in each hub). If any resin settles onto the container bottom prior to pouring, agitate more. Make sure all caps/plugs are tight after treating.
3. If any resin settles onto the container bottom prior to pouring, agitate more.
4. If your truck or equipment has dual (2) power-steering boxes, use two (2) bottles of Enviro-Save[®] Power-Steering Treatment.
- 5.. **Read the yellow Diesel Engine Treatment Application Information Sheet prior to proceeding with treating your engine.**

NOTES:

Use only Enviro-Save[®] Diesel Engine Treatment in diesel engines.

Use only Enviro-Save[®] Automatic Transmission Treatment in automatic transmissions.

Enviro-Save[®] is GUARANTEED not to cause any damage when used as directed.

[All our Products are backed by Insurance from Aon and Lloyds of London, Protecting Your interest.](#)

QUESTIONS?

Please contact Enviro-Save[®] — Tel: 778-412-9333 / Fax: 778-412-9334 / Email- doug@envirosave.net / www.envirosave.net