

# **HD Truck Treatment – Instruction Sheet**

## **for Enviro-Save® Powertrain Protection Kit with**

### **New Diesel Engine Treatment**

Your Powertrain Protection Kit contains products to protect your truck's engine, transmission(s), transfer case (if multi wheel drive), differential(s), wheel bearing oil hubs and power-steering. Once treated, you will save money in various ways and assist in reducing global pollution by using Enviro-Save® Engine & Powertrain Protection Metal Treatment.

For best results, the application procedures should be carried out at a convenient time when the truck or equipment can be **operated for 1 hour minimum** after all components are treated. Treat the engine and fuel system last. **Gas engines** must have clean oil and new oil filter prior to treating. **City driven Diesel Engines or Diesel Engines with over 100,000kms / 65,000 miles of highway mileage must use:** Enviro-Save® Diesel Engine Pre-Treatment Cleaner (8 - 10% of engine oil capacity) for 1500kms or 1000 miles or 15 hours of **accumulated** operating time prior to a hot oil/filter(s) change. **All Diesel Engine Crankcase Treatments must be used with clean oil and new oil filter(s).**

1. **Read and follow all application instructions and notes carefully**, noting specific treatment quantities of the various different treatments listed within or on the containers.
2. Prior to pouring, **check bottle cap - invert and shake all containers vigorously for minimum 15 seconds** to thoroughly disperse resin, check bottom of container for resin / sufficient agitation. In cold climates, bring products up to room temperature prior to agitation. If any resin settles onto the container bottom prior to pouring, agitate more.
3. Remove oil filler caps/plugs on transmission(s), transfer case, differential(s), steering axle wheel bearing oil hubs and power-steering. Install treatment from respective labeled containers. Invert and agitate the recommended amount of Gear/Differential Treatment and pour it into the transmission(s), transfer case, differential(s), and wheel bearing oil hubs (60 ml / 2 oz. in each hub). Make sure all caps/plugs are tight after treating.
4. If your truck or equipment has dual (2) power-steering boxes, use two (2) bottles of Enviro-Save® Power-Steering Treatment.
5. **Carefully read the green New Diesel Engine Treatment Application Information Sheet prior to proceeding with treating the engine.**

#### **NOTES:**

**Use only Enviro-Save® Diesel Engine Treatment in diesel engines.**

**Use only Enviro-Save® Automatic Transmission Treatment in automatic transmissions.**

**Enviro-Save® is GUARANTEED not to cause any damage when used as directed.**

[All our Products are backed by Insurance from Aon and Lloyds of London, Protecting Your interest.](#)

#### **QUESTIONS?**

Please contact Enviro-Save® — Tel: 778-412-9333 / Fax: 778-412-9334 / Email-  
[doug@envirosave.net](mailto:doug@envirosave.net) / [www.envirosave.net](http://www.envirosave.net)